



**How to set your LockMed
combination lock**

ASA-1200, 1400, 1500

1. By default, the lock combination will be set to 0-0-0.




2. To open your combination lock, push the button to the right.



3. With the lock open, remove the red plastic tab that is holding the number wheels in place.



4. To set the combination, while still on 0-0-0, push button to the left and hold it in place while changing the number wheel to your desired code.

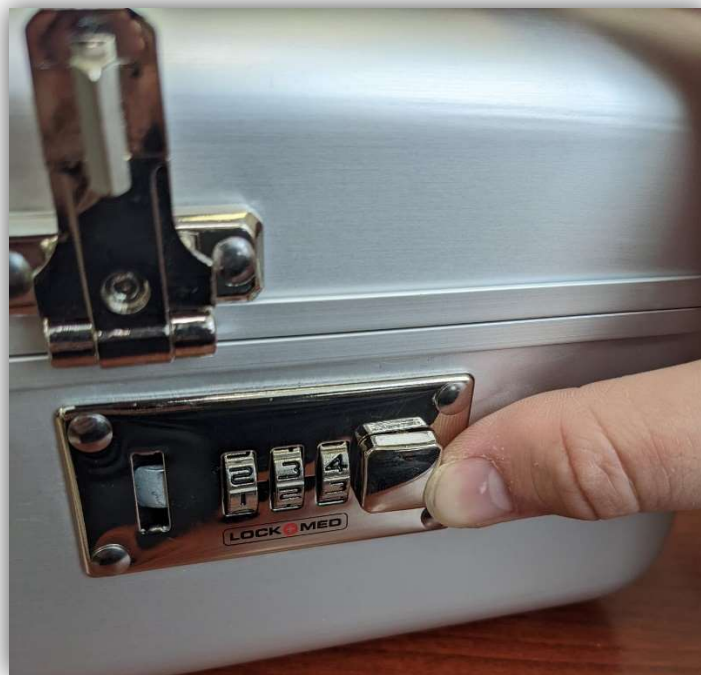

5. Once you have set the code you'd like, release the button, and push it to the right to check that the code is working.



6. With the combination set, you can now close the latch and scramble the number wheel.